

Flooring

Parquet Versailles











05/2024 B TP EN 13

**Schotten
& Hansen**

Nature Refined.

Parquet Versailles

Product specifications

Description	Construction: Top-Layer: Carrier:	Multi-layer engineered board Oak veneer, other type of wood on request Birch plywood
Length x Width¹	Type A: 750 × 750 mm Type B: 1000 × 1000 mm	
Thickness²	19 mm (± 0.5 mm)	
Top-layer¹	4.5 mm (± 0.5 mm); glued waterproof and formaldehyde-free.	
Profile processing	Groove on all sides. Chamfer: approx. 0.7 mm, 30°. Connection by means of external springs (11 mm wide, 5 mm thick).	
Surface	Schotten & Hansen pre-finished, permeable surface. Surface treatment with natural oils, resins and waxes. Schotten & Hansen surfaces can be regenerated without sanding or mechanical treatment. Avoid strongly acidic and alkaline agents.	
Wood moisture content	On delivery: approx. 8 % ex works. A special drying process during production reduces shrinkage and swelling behaviour of the floorboards after installation.	
Performance characteristics³		Fire behaviour: Cfl – s1 according to EN 13501-1:2010
		Chemical resistance according to EN 13442:2023-04, Method A+B: predominantly no visible changes
		Slip resistance EN 16165:2021-10 Annex B: Class R9, Annex D: Floor system suitable for unrestricted use
		Impact sound EN ISO 10140-3:2021-09: 15 dB
		Formaldehyde emission according to EN 14342: Class E1, measured according to EN 717- 1
		Underfloor heating: Suitable for hot water or electric underfloor heating. Thermal conductivity λ [W/(m*K)]: Overall structure with oak veneer 0.13. Thermal resistance R [m²K/W]: Overall structure 0.15 (calculated according to EN 14342:2013).
		VOC emissions according to AgBB scheme < 1 mg / m³
		
Cleaning & Care	Schotten & Hansen cleaning and caring products. Schotten & Hansen recommends the use of a floor polishing machine. For further information please see the cleaning and caring instructions or contact our service department: service@schotten-hansen.com	
Recycling	Our wood products can be recycled in accordance with category A2 of the Waste Wood Ordinance.	

¹ Other total thickness of boards possible on request

² Other formats on request

³ Test reports available on request.

Parquet Versailles

Edition Oak

	light	medium	dark
Pebble Stone			
Oyster			
Linen			
Smoke			
Mocha			

Custom colours available on request.

Character Selection⁴

1 Fine Even and calm wood structure with few small knots and fine cracks, mended by hand.

2 Medium Distinct wood structure with knots, shrinkage and wind cracks, mended by hand.

Up to 5% of the boards may originate from the corresponding neighboring selection.

Treatment⁴

3 Shrunken⁵ Special processes create an expressive surface with the character of naturally aged wood.

For other finishes, see the Parquet Versailles „Elegance“ and „Antique“.



Subject to variations in colour between floorboards and display exhibits or samples, as far as these are due to the natural quality of the used material as well as customary.

⁴ Available on request / selectable. Possibly not available in all colours and/or sizes. Customised products on request (minimum quantity)


⁵ Patented Schotten & Hansen surface treatment

**Schotten
& Hansen**

Schotten & Hansen GmbH, August-Moralt-Straße 1, 86971 Peiting, Germany
T +49 8861 90804-0, kontakt@schotten-hansen.com, www.schotten-hansen.com

1. Fine


Even and calm wood structure, with few small knots and fine cracks, mended by hand.

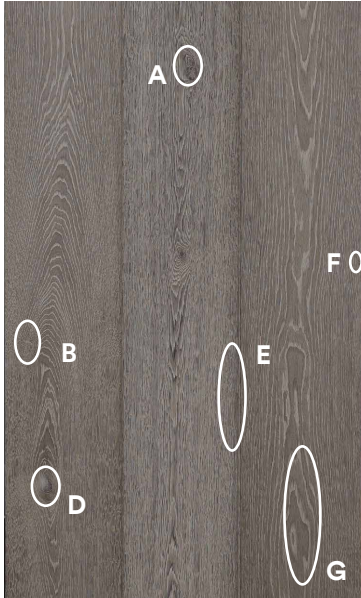

Not included: Splay knots, moon rings

2. Medium


Distinct wood structure, with knots, shrinkage and wind cracks, mended by hand.

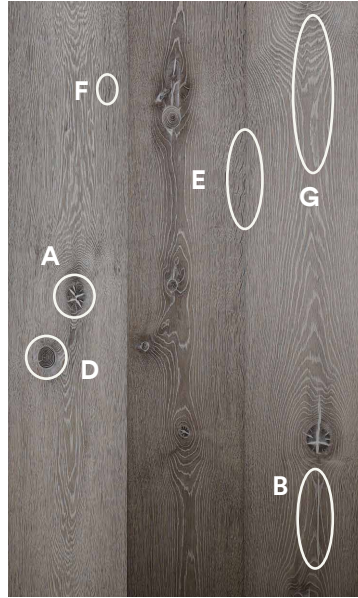

Not included: Splay knots

3. Coarse

Very lively wood structure, with selected knots, distinctive shrinkage and wind cracks, mended by hand.

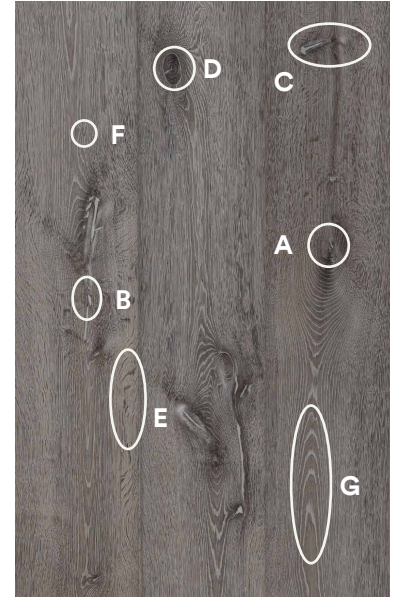

Characteristics

A Knot (intergrown)



B Cracks



C Splay knots




D Loose knots



E Medullary rays



F Pinknods



G Cathedral



H Moon rings



Description

Knots firmly intergrown together with the wood tissue. The cracks in a knot are filled by hand.

Cracks caused by e.g. growth stresses or mechanical impacts such as wind, frost or dry weather periods are filled by hand, using a specially produced putty, colour matched to the wood colouration.

When a branch is cut along its longitudinal axis, this results in a splay knot, stretching out from the core.

A knothole happens when a knot separates from the wood tissue and drops out. These holes are manually filled with matching wooden implants.

The flakes are created by the medullary rays of a tree that formerly provided it with water and nutrients. Transversely running rays are more frequently represented in both the medium and coarse grades.

Very small knots, which appear in the form of dots, occasionally in close arrangements in the medium and coarse grade selections.

The wood pores follow the consecutive annual rings. In the medium and coarse selection grades, the otherwise conical curves may also take a wild course.

Late frost periods can cause the formation of moon rings, which appear as visible light rings in the cross-section. These rings occur more often in the medium and coarse grades, which are not depicted in the images above.

The above images symbolise the respective characteristics. These characteristics may appear slightly differently, depending on the chosen treatment and colouration, among other factors. Please note, up to 5% of your order quantity can include planks from an adjacent grade selection.

Parquet Versailles

Further Information

Indoor climate and wooden floor

Wood is a natural material that is adjusting to the indoor climate. Wood absorbs moisture from the air and releases it again.

We would like to point out that during the heating period, the floorboards might strongly dry out and thus develop shrinkage cracks. Cracks caused by low air humidity during the heating period do not justify complaint.

With the maintenance of a comfortable and healthy indoor climate of 20° C and 50% relative humidity during the heating season, you can largely avoid the negative effects of this natural phenomena.

Thermal- and hygrometers control the air in your rooms easily. In case the air is too dry, suitable measures for humidifying the air must be taken. We recommend you a humidifier control - hygrostat for obtaining a constant air humidity.

Installation should be carried out professionally by a trained Schotten & Hansen partner.

Bonding

The preparation of the subsoil is to be carried out in accordance with the guidelines of the adhesive manufacturer and relevant DIN standards.

For the bonding of all Schotten & Hansen floor products we recommend a solvent-free and elastic adhesive e.g. BONA Quantum or equivalent product (the parquet adhesive used must be approved by the building authorities).

In the process of glueing, full bonding to the subsoil and a sufficient contact pressure during the setting has to be ensured.

Bonding on Screed

First, an inspection of the subsoil and the application requirements has to be conducted according to VOB Part B DIN 1961, Part C DIN 18356 and DIN 18202 Table 3, line 4 increased requirement.

Due to the large lengths and widths of some flooring products, increased care is required for the evenness of the subsoil.

Installation on underfloor heating

All Schotten & Hansen long boards are to be fully bonded with elastic adhesive to underfloor heating. Prior to this, a thorough inspection of the heating screed's readiness for installation has to be carried out – in particular the heating protocol and the details of test points (pursuant to DIN standards) have to be documented by the screed layer. The adhesive must be suitable for bonding on an underfloor heating system.

Please observe the maximum surface temperature of 29° C.

Additionally, during a heating-period the air humidity should be improved. Otherwise the floorboards might strongly dry out and develop shrinkage cracks. Cracks caused by low air humidity during the heating period do not justify complaint.

Important measurements prior to installation:

- Let the unpacked workpieces acclimatise in the final room conditions for approx. one week until the equilibrium moisture content is reached.
- Switch off underfloor heating three days before installation.
- Measure moisture content of the screed.
- Keep room climate constant at 45 % ± 5 % relative air humidity. This also applies for the next few days after the installation (during this time increase underfloor heating by 5° C per day).
- Prepare a heating protocol.

Screw on wooden substructures

Available wood or particle board, the boards can be obliquely screwed into the spring. The spacing of the joists should not exceed 35 cm. A sufficient sound insulation has to be ensured. Felt or cork strips to the battens limit a creaking noise.

All information on this data sheet is to be considered as advice and is based on empirical investigations according to today's state of the art. Therefore, all provided information on the suitability, processing and application of our products, as well as technical advice and further particulars, do explicitly not release the customer and/or user from verifying the products' suitability by means of their own tests.